

MIFARE & ISO14443A & ISO14443B & ISO15693 CONTACTLESS, ISO7816 CONTACT IC CARD
READ/WIRTE MODULE

JMY680F IC Card Reader

User's manual

(Revision 3.50)

Jinmuyu Electronics Co. LTD

2012/6/27



Please read this manual carefully before using. If any problem, please mail to: Jinmuyu@vip.sina.com



Contents

1	Product introduction.....	4
2	Characteristics	4
3	Physical parameter and pin outs.....	5
3.1	Photo.....	5
3.2	Dimension	5
3.3	Pin configurations and Pin outs.....	6
3.4	Model available	6
3.5	Model naming rule	7
3.5.1	Model format.....	7
3.5.2	Card operating type	7
3.5.3	Communication port.....	7
4	Communication Protocols	8
4.1	Overview	8
4.2	UART protocol	8
4.2.1	Parameters	8
4.2.2	Data send format	8
4.2.3	Data return format	8
4.3	IIC protocol	9
4.3.1	Module IIC address and multi device communications	9
4.3.2	IIC device operation	9
4.3.2.1	Clock and data transaction.....	9
4.3.2.2	Start condition	9
4.3.2.3	Stop condition.....	9
4.3.2.4	Acknowledge (ACK).....	10
4.3.2.5	Bus state	10
4.3.2.6	Device addressing.....	10
4.3.2.7	Write data operation	10
4.3.2.8	Read data operation	11
4.3.3	Data transaction	11
4.3.4	Data send format	11
4.3.5	Data return format	11
4.3.6	Description of IIC command transaction.....	12
5	Description of commands.....	13
5.1	List of commands	13
5.2	Explanation of commands	15
5.2.1	Read product information.....	15
5.2.2	Module working mode set.....	15
5.2.3	Set module idle.....	16
5.2.4	Set LED	16
5.2.5	Set buzzer	17
5.2.6	EEPROM read	17
5.2.7	EEPROM write.....	18



5.2.8	Set UART communication baud rate	18
5.2.9	Set UART multi-device communication address	18
5.2.10	Set IIC communication address.....	19
5.2.11	Set multi-card operation	19
5.2.12	Set ISO15693 automatic detect card AFI and AFI enable	20
5.2.13	Set automatic detect card interval time.....	20
5.2.14	Set the default automatic detect card state default.....	21
5.2.15	Set automatic detect card and output card UID default.....	21
5.2.16	ISO14443A request cards	22
5.2.17	Mifare 1K/4K data block read.....	22
5.2.18	Mifare 1K/4K multi blocks read.....	23
5.2.19	Mifare 1K/4K data block write.....	23
5.2.20	Mifare 1K/4K multi blocks write	24
5.2.21	Mifare 1K/4K purse block initialize.....	24
5.2.22	Mifare 1K/4K purse read.....	25
5.2.23	Mifare 1K/4K purse increment.....	25
5.2.24	Mifare 1K/4K purse decrement	26
5.2.25	Mifare 1K/4K purse copy	26
5.2.26	ISO14443A card halt	27
5.2.27	Download Mifare 1K/4K card key to module	27
5.2.28	ISO14443-4 TYPE-A card reset (RATS).....	27
5.2.29	Send APDU to ISO14443-4 card.....	28
5.2.30	Ultra Light card read	28
5.2.31	Ultra Light card write	29
5.2.32	SAM slot default baud rate set	29
5.2.33	SAM reset.....	30
5.2.34	Set SAM baud rate after reset (through PPS)	30
5.2.35	Send APDU to SAM.....	30
5.2.36	Set module contactless protocol	31
5.2.37	ISO14443-4 TYPE B card request	31
5.2.38	ISO14443-4 TYPE B card halt.....	31
5.2.39	SR serial cards 1 slot initiate card	32
5.2.40	SRI serial cards 16 channels initiate card.....	32
5.2.41	SR serial cards select.....	33
5.2.42	SRI serial cards return to inventory	33
5.2.43	SR serial cards completion	33
5.2.44	SR176 card read	34
5.2.45	SR176 card write	34
5.2.46	SR176 data block lock.....	34
5.2.47	SRI serial cards read.....	35
5.2.48	SRI serial cards write	35
5.2.49	SRI serial cards data block lock	36
5.2.50	SRI serial cards read UID	36
5.2.51	SRIX serial cards authentication	36



5.2.52	ISO15693 inventory	37
5.2.53	ISO15693 stay quiet	37
5.2.54	ISO15693 get system information.....	37
5.2.55	ISO15693 reset to ready	38
5.2.56	ISO15693 read blocks	38
5.2.57	ISO15693 write blocks.....	39
5.2.58	ISO15693 block lock.....	39
5.2.59	ISO15693 AFI write	39
5.2.60	ISO15693 AFI lock	40
5.2.61	ISO15693 DSFID write.....	40
5.2.62	ISO15693 DSFID lock	40
5.2.63	ISO15693 get blocks security.....	41
5.3	About KEY Identification	42
5.4	About the automatic detecting card.....	42
5.5	Example of commands	44
5.5.1	About UART communication protocol	44
5.5.2	UART commands sample.....	44
5.5.3	IIC commands sample	44
5.6	Interface program source code	44



1 Product introduction

JMY680F is a RFID read/write module with UART, IIC, RS232C or USB port. JMY680F has various functions and supports multi ISO/IEC standard of contactless card. The RF protocol is complex, but the designer combined some frequent used command of RF card and then user could operate the cards with full function by sending simple command to the module. The modules build in SAM slot. It could operate contact smart card according to ISO7816.

The module has a length of 506 bytes command buffer could send APDU over 256 bytes to T=CL smart cards and SAM cards. The modules support FSDI=8 of ISO14443-4. The module and antenna is integrated. The impedance between RF circuit and antenna was tuned by impedance analyzer, and then the module has excellent performance and stability. There is ferrite plate between main PCB and antenna, so such design applies to some metallic-around systems.

2 Characteristics


- PCD model: NXP CL RC632
- Working frequency: 13.56MHz
- Supported standard: ISO14443A, ISO14443B, ISO15693, ISO7816
- Card supported: Mifare 1K/4K, FM11RF08, Ultra Light, DesFire, Mifare ProX, SR176, SRI512, SRI1K, SRI2K, SRI4K, SRIX4K, T=CL CPU cards(both ISO14443A & ISO14443B), TI Tag It, I. Code SLI, ST LRI and other tags according to ISO15693, and ISO7816 SAM cards (both T=0 & T=1)
- Anti collision ability: Full function anti collision; be able to process multi-cards; be able to set operate single card only
- Auto detecting card: Supported, default OFF. The default state could be set.
- SAM slot: 1 slot
- SAM baud rate: 9600bps/38400bps
- ISO7816 PPS set: Supported
- EEPROM: 512 Bytes
- Power supply: DC 5V ($\pm 0.5V$)
- Interface: IIC/UART/RS232C/USB (select when place order)
- Communication rate: IIC: 400Kbps
UART/RS232C/USB: 19.2Kbps/115.2Kbps
- Max. command length: 511 Bytes
- Interface level: UART/IIC: 3.3V (TTL level; 5V tolerance)
- Power consumption: 150mA
- Operating distance: 80mm (depending on card and antenna design)
- Dimension: 70mm*50mm*16.5mm
- Weight: About 120g
- ISP: Supported
- Operating temperature: -25 to +85 °C





- Storage temperature: -40 to +125 °C
- RoHS: Compliant

3 Physical parameter and pin outs

3.1 Photo

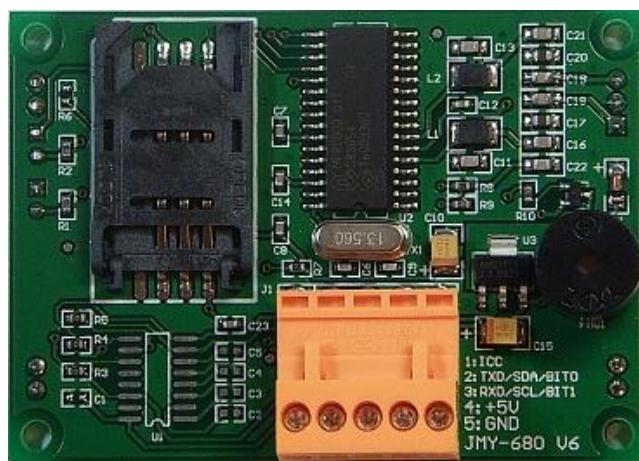

3.2 Dimension

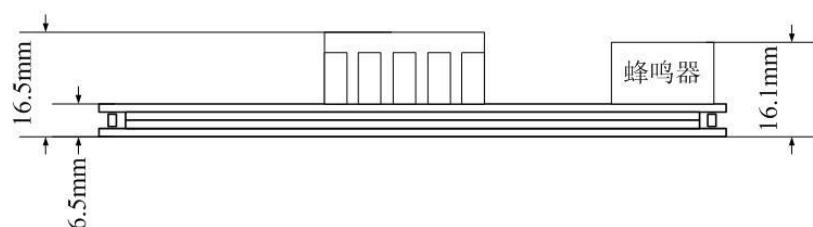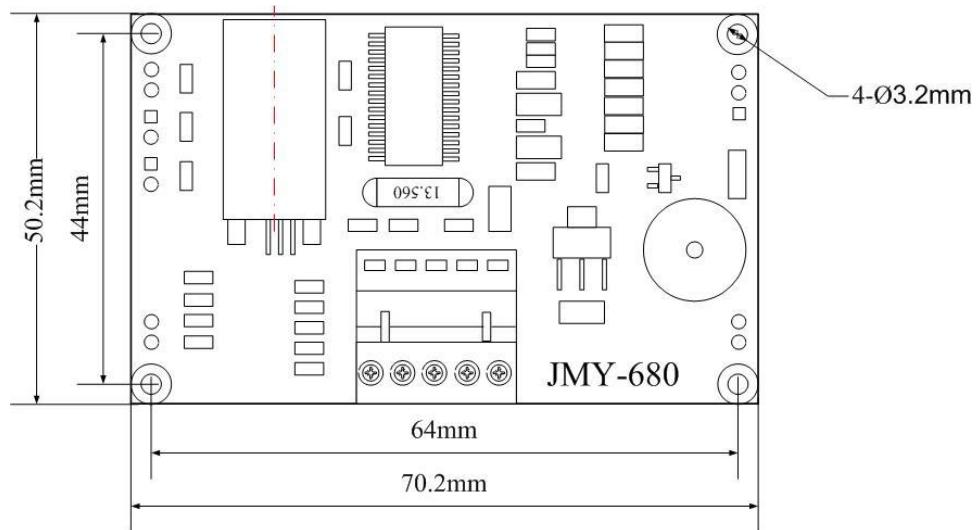



3.3 Pin configurations and Pin outs

Pin number	Function	Type	Description
1	ICC	Output	Card in/out indication 0: Card IN; 1: Card OUT
2	TXD/SDA	Input/output	RS232C TXD / UART TXD / IIC SDA
3	RXD/SCL	Input	RS232C RXD / UART RXD / IIC SCL
4	VCC	Power	VCC
5	GND	Power	GND

3.4 Model available

- JMY680FI IIC interface
- JMY680FT UART interface, TTL level
- JMY680FS RS232C (UART interface, RS232 level)
- JMY680FU USB to UART Bridge (Mini USB port with 5 pins)



3.5 Model naming rule

3.5.1 Model format

1	2	3	4
JMY	680	X	X

1: company code; 2: product series code; 3: card operating type; 4: communication port type

3.5.2 Card operating type

M: PCD is RC500, support Mifare Class

A: PCD is RC500, support ISO14443A and Mifare Class

C: PCD is RC531, support ISO14443A, ISO14443B and Mifare Class

G: PCD is RC400, support ISO15693

H: PCD is RC632, support ISO15693, ISO14443A, ISO14443B and Mifare Class

D: PCD is RC500, support ISO14443A and Mifare Class with 511 bytes communication buffer

E: PCD is RC531, support ISO14443A/B and Mifare Class with 511 bytes communication buffer

F: PCD is RC632, support ISO15693, ISO14443A, ISO14443B and Mifare Class with 511 bytes communication buffer

3.5.3 Communication port

I: IIC

T: UART

S: RS232C

U: USB



4 Communication Protocols

4.1 Overview

There are IIC and UART two types of hardware interface between the module and host. We recommend using IIC interface whose communication data rate is up to 400Kbps. But the baud rate of UART is 19.2Kbps and 115.2Kbps. We supply sample source code in C and ASM of MCS51 of the interface program both in IIC and UART. IIC mode is very convenient, user may not modify the sample code except pin definition for actually use.

Whatever types of interface user chooses. Please read this chapter before programming and refer to the sample program. There are detailed comments in the sample source code.

4.2 UART protocol

4.2.1 Parameters

The communication protocol is byte oriented. Both sending and receiving bytes are in hexadecimal format. The communication parameters are as follows:

- Baud rate: 19200bps(default), 115200bps
- Data bits: 8 bits
- Stop bits: 1 bit
- Parity check: None
- Flow control: None

4.2.2 Data send format

- Host send:

Length	C.A.	Command	Data	Checksum
--------	------	---------	------	----------

- Length: 2 bytes, number of bytes from length byte to the last byte of Data, MSB first
- C.A.(communication address): the address of UART multi-device communication, default address: 1; broadcast address: 0
- Command: 1 byte, the command of this instruction
- Data: length depends on the command type, length from 0 to 506 bytes
- Checksum: 1 byte, Exclusive OR (XOR) results from length byte to the last byte of data

4.2.3 Data return format

- Success:



Length	C.A.	Command	Data	Checksum
--------	------	---------	------	----------

- Failure:

Length	C.A.	Invert Command	Checksum
--------	------	----------------	----------

4.3 IIC protocol


4.3.1 Module IIC address and multi device communications

IIC bus is able to connect with 128 devices. The IIC address of module is default 0xA0. Users change the address setting via sending the command (0x19), so that user could connect multi module on the same IIC bus.

4.3.2 IIC device operation

4.3.2.1 Clock and data transaction

The SDA pin is normally pulled high with an external device. Data on the SDA pin may change only during SCL low time periods. Data changes during SCL high periods will indicate a start or stop condition as defined below.

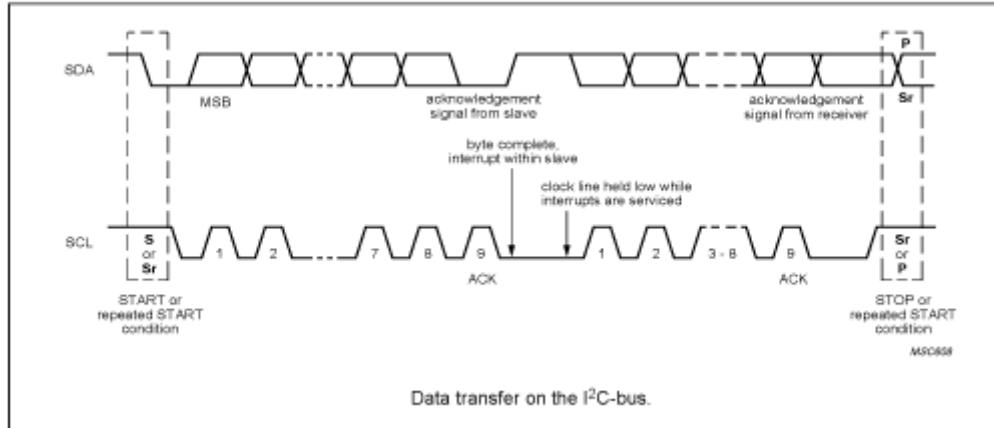


4.3.2.2 Start condition

A high-to-low transition of SDA with SCL high is a start condition, which must precede any other command.

4.3.2.3 Stop condition

A low-to-high transition of SDA with SCL high is a stop condition.

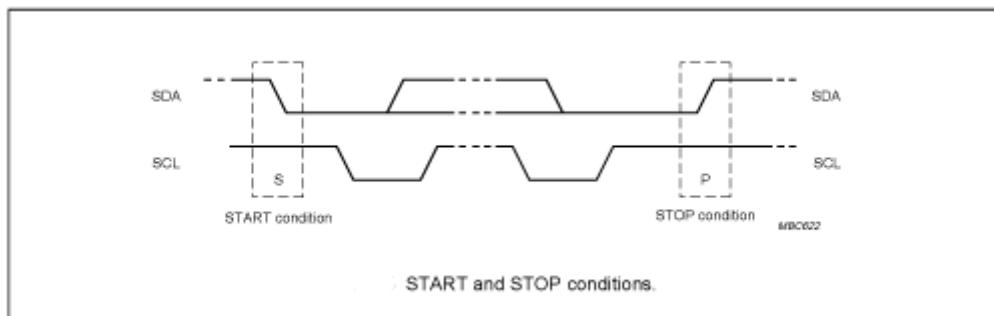


4.3.2.4 Acknowledge (ACK)

All addresses and data words are serially transmitted to and from the module in 8-bit words. The module sends a zero to acknowledge that it is not busy and has received each word. This happens during the ninth clock cycle.

4.3.2.5 Bus state

When the module has received command, and then doesn't acknowledge I²C bus until ends with the card communication.

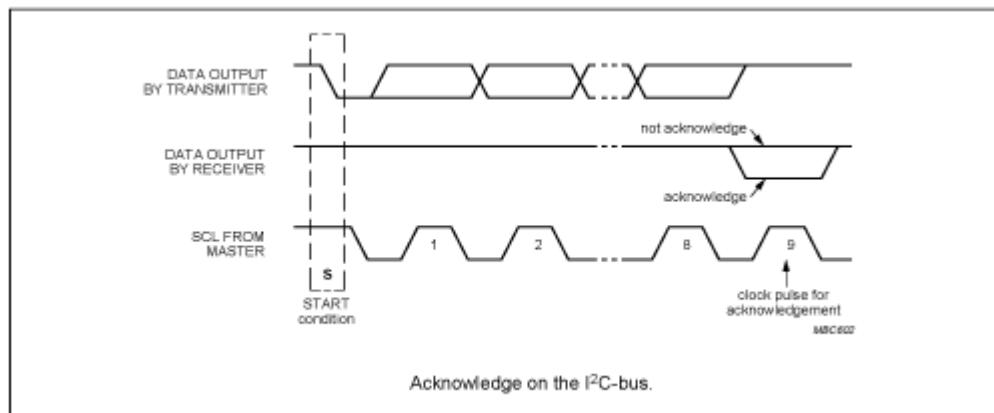

4.3.2.6 Device addressing

The module requires an 8-bit device address following a start condition to enable the chip for a read or write operation.

The device address word consists of 7 addressing bits and 1 operation select bit.

The first 7 bits of the module address are 1010000 (0xA0 in hex)


The eighth bit of the device address is the read/write operation select bit. A read operation is initiated if this bit is high and a write operation is initiated if this bit is low.



The first byte after the START procedure.


4.3.2.7 Write data operation

The host device sends a command to module via write operation.

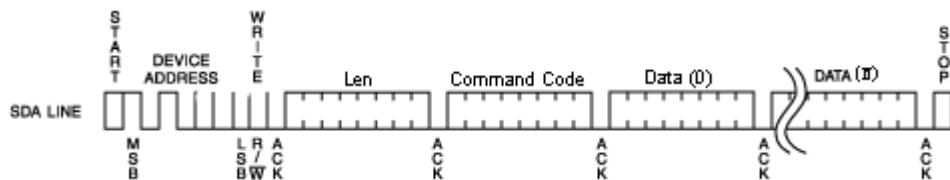

4.3.2.8 Read data operation

The host device gets result via read operation.

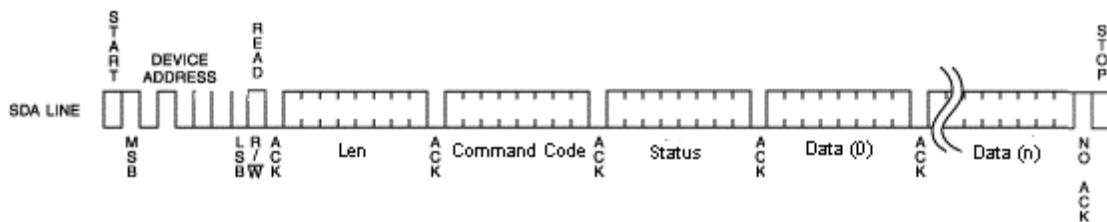

4.3.3 Data transaction

The module is a slave device of the IIC bus, then the host need to write the command package to module. The module will execute the command. Then the host needs to poll the status of the module while it is working by sending out the command of “read” continuously. If the module answered to a read operation, then the last command execution were finished. At this time the host could read the result and/or data from the module. The read and write operation see chapter 4.2.2.7 and 4.2.2.8.

4.3.4 Data send format

Length	RFU	Command	Data	Checksum
--------	-----	---------	------	----------

- Length: 2 bytes, number of bytes from length to the last byte of Data, MSB first
- Command: 1 byte, the command of this instruction
- RFU: 1 byte, the address of UART multi-device communication; when IIC, then write 0
- Data: Data length depending on the command type, length from 0 to 506 bytes
- Checksum: 1 byte, Exclusive OR (XOR) results from length byte to the last byte of data

4.3.5 Data return format

- Success:

Length	RFU	Command	Data	Checksum
--------	-----	---------	------	----------

- Failure:

Length	RFU	Invert Command	Checksum
--------	-----	----------------	----------



4.3.6 Description of IIC command transaction

E.g.: to read the block 1 of Mifare card, the steps:

Send command: 000C00210001FFFFFFFFFFFF2C

There are steps here:

A. Write command to module

1. Start condition
2. Send control byte, it is 0xA0, the meaning is: address 0xA0 + write control 0x00
3. Send module command: 0x000C210001FFFFFFFFFFFF
4. Send command checksum: 0x2C
5. Stop condition

B. Send IIC read command. If module no ACK, then the module is working. Repeat this step.

1. Start condition
2. Send control byte 0xA1, it is IIC slave address 0xA0 + read control 0x01
3. If module is no ACK, go to step B. if yes, go to step C

C. Get the data bytes from module

1. Get 2 bytes and send ACK, if the data is 0x0014, the meaning is there are 0x0014 bytes useful bytes in this package.
2. Get the else 18 bytes data (0x0014-2=0x0012) and send ACK after every byte
3. Get the checksum and send NACK
4. Stop condition

D. Verify the checksum. if ok then the communication is ok

E. Verify the received data from fourth byte; this byte is the status of the command just executed. If equal to the command (0x21) then the command execute successful. Then the 16 bytes data started from third byte are correct.



5 Description of commands

5.1 List of commands

Command code	Command function
0x10	Read the product information
0x11	Module working mode set
0x12	Sets module idle
0x13	Set LED
0x14	Set the buzzer
0x15	EEPROM read
0x16	EEPROM write
0x17	Set UART communication baud rate
0x18	Set UART multi-device communication address
0x19	Set IIC address
0x1A	Set multi-card operation
0x1B	Set ISO15693 automatic detecting card AFI and AFI enable
0x1C	Set automatic detecting card interval time
0x1D	Set the default automatic detect card state default
0x1E	Set automatic detect card and output card UID default
0x20	ISO14443A Request cards
0x21	Mifare 1K/4K data block read
0x2A	Mifare 1K/4K multi blocks read
0x22	Mifare 1K/4K data block write
0x2B	Mifare 1K/4K multi blocks write
0x23	Mifare 1K/4K purse block initialize
0x24	Mifare 1K/4K purse read
0x25	Mifare 1K/4K purse increment
0x26	Mifare 1K/4K purse decrement
0x27	Mifare 1K/4K purse copy
0x28	ISO14443A card halt
0x2D	Download Mifare 1K/4K card key to module
0x30	ISO14443-4 TYPE-A card reset (RATS)
0x31	Send APDU to ISO14443-4 card
0x41	Ultra Light card read
0x42	Ultra Light card write
0x50	SAM slot reset baud rate set
0x51	SAM reset
0x52	Set SAM baud rate after reset (through PPS)
0x53	Send APDU to SAM
0x70	Set module read card mode



0x60	ISO14443-4 TYPE B card reset
0x62	ISO14443-4 TYPE B card halt
0x63	SR serial cards 1 slot initiate card
0x64	SRI serial cards 16 slots initiate card
0x65	SR serial cards select
0x66	SRI serial cards return to inventory
0x67	SR serial cards completion
0x68	SR176 card read
0x69	SR176 card write
0x6A	SR176 data block lock
0x6B	SRI serial cards read
0x6C	SRI serial cards write
0x6D	SRI serial cards lock block
0x6E	SRI serial cards read UID
0x6F	SRIX serial cards authentication
0x5C	ISO15693 inventory
0x5D	ISO15693 stay quiet
0x5E	ISO15693 get system information
0x5F	ISO15693 reset to ready
0x54	ISO15693 read blocks
0x55	ISO15693 write blocks
0x56	ISO15693 lock block
0x57	ISO15693 write AFI
0x58	ISO15693 lock AFI
0x59	ISO15693 write DSFID
0x5A	ISO15693 lock DSFID
0x5B	ISO15693 get blocks security



5.2 Explanation of commands

5.2.1 Read product information

Function: Read the product information of CURRENT PRODUCT, includes product name, firmware version, firmware date and configuration information.

Host sends:

0x0004	C.A.	0x10	Checksum
--------	------	------	----------

Module returns success:

0x0021	C.A.	0x10	Info.	Checksum
--------	------	------	-------	----------

Information: 29bytes, 8 bytes product name(0x4A 4D 59 36 38 30 46 20), 4 bytes firmware version(0x35 2E 33 33), 8 bytes firmware date(0x32 30 31 32 30 33 30 32), 1 byte UART baud rate code(0x00), 1byte UART multi-device communication address(0x01), 1 byte IIC address(0xA0), 1 byte multi-card operation enable state(0x01), 1 byte ISO15693 automatic detecting card AFI(0x00), 1 byte ISO15693 automatic detecting card enable state(0x00), 1 byte automatic detecting card interval(0x14) (multiple of 10mS), 1 byte default automatic detecting card status when power on(0x00), 1 byte default automatic output SNR set when power on(0x00)

Data in the brackets above taken from JMY680F default product information, as follow:

Send: 0x00 04 00 10 14

Return: 0x00 21 01 10 4A 4D 59 36 38 30 46 20 35 2E 33 33 32 30 31 32 30 35 32 39 00 01
A0 01 00 00 14 00 00 96

Module returns failure:

0x0004	C.A.	0xEF	Checksum
--------	------	------	----------

5.2.2 Module working mode set

Function: Set the antenna RF output ON/OFF; set the automatic detecting card ON/OFF; set automatic detect card and output card UID ON/OFF. Antenna RF output is default ON, and automatic detecting card is OFF, automatic detect card and output card UID if OFF. The module will NOT SAVE the setting, and all settings will LOSE on next power up. The



multi-card operation will be prohibited while users turn ON the automatic detecting card. If there is more than one card in the RF electric field then the operation will fail.

Host sends:

0x0005	C.A.	0x11	Mode	Checksum
--------	------	------	------	----------

Mode: 1 byte

Antenna status: BIT0= 0: OFF; BIT0= 1: ON

Auto request: BIT1= 0: OFF; BIT1= 1: ON

Auto request and output UID: BIT2= 0: OFF; BIT2= 1: ON

Module returns success:

0x0004	C.A.	0x11	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xEE	Checksum
--------	------	------	----------

5.2.3 Set module idle

Function: Set the module idle. In idle mode, the module of RF output turn to OFF, PCD power down, and CPU in idle mode, so the power consumption reduces to about 100uA. Sending the next command to module will wake up the module, and then the RF output ON and automatic detecting card restore default settings. The module will enter into idle mode after the answer procedure is finished. In IIC mode, host need to read the answer and then the module will goes into idle mode.

Host sends:

0x0005	C.A.	0x12	Random data	Checksum
--------	------	------	-------------	----------

Random data: 1 byte random data, for example: 0x55

Module returns success:

0x0004	C.A.	0x12	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xED	Checksum
--------	------	------	----------

5.2.4 Set LED

Function: Set the LED ON or OFF.

**Host sends:**

0x0005	C.A.	0x13	State	Checksum
--------	------	------	-------	----------

State: 1 byte, 0: OFF, 1: ON, other value: RFU

Module returns success:

0x0004	C.A.	0x13	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xEC	Checksum
--------	------	------	----------

5.2.5 Set buzzer

Function: Set buzzer to beep.**Host sends:**

0x0005	C.A.	0x14	Time	Checksum
--------	------	------	------	----------

Time: 1 byte time, time unit is 10mS. If time is 0x0A, then the beep time is 100mS

Module returns success:

0x0004	C.A.	0x14	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xEB	Checksum
--------	------	------	----------

5.2.6 EEPROM read

Function: Read data in EEPROM of the module.**Host sends:**

0x0007	C.A.	0x15	Address	Bytes	Checksum
--------	------	------	---------	-------	----------

Address: 2 bytes, read start address, address from 0x0000 to 0x01FF, MSB first

Bytes: 1 byte, number of bytes to read, max. 64 bytes

Module returns success:

-	C.A.	0x15	Data	Checksum
---	------	------	------	----------

Note: the byte length is “-”, means the byte length depends on the card feedback information.

(The same to below)

Data: data read

Module returns failure:



0x0004	C.A.	0xEA	Checksum
--------	------	------	----------

5.2.7 EEPROM write

Function: Write data into EEPROM of the module

Host sends:

-	C.A.	0x16	Address	Bytes	Data	Checksum
---	------	------	---------	-------	------	----------

Address: 2 bytes, write start address, address from 0x0000 to 0x01FF, MSB first

Bytes: 1 byte, number of bytes to write, max. 64 bytes

Data: “Bytes” data to write

Module returns success:

0x0004	C.A.	0x16	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xE9	Checksum
--------	------	------	----------

5.2.8 Set UART communication baud rate

Function: Set UART communication baud rate of the module. After module receive the command, it will first save the new setting, and then send the execute result according to the host. At last it will validate the new setting. UART communication baud rate is default 19200bps. Settings will SAVE in the module; it will not be lost after power OFF.

Host sends:

0x0005	C.A.	0x17	Baud rate	Checksum
--------	------	------	-----------	----------

Baud rate: 1 byte, baud rate code; 0: 19200bps; 1: 115200bps

Module returns success:

0x0004	C.A.	0x17	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xE8	Checksum
--------	------	------	----------

5.2.9 Set UART multi-device communication address

Function: Set UART multi-device communication address of the module. After module receive the command, it will save the new setting first, and then send the execute result to



the host. At last it will validate the new setting. UART multi-device communication address is default 1. Settings will SAVE in the module; it will not be lost after power OFF.

Host sends:

0x0005	C.A.	0x18	Address	Checksum
--------	------	------	---------	----------

Address: 1 byte, UART multi-device communication address:1~0xFF

Module returns success:

0x0004	C.A.	0x18	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xE7	Checksum
--------	------	------	----------

5.2.10 Set IIC communication address

Function: Set IIC communication address of the module. After module receive the command, it will first save the new address, and then send the executed result to the host. At last it will validate the new settings. The IIC address of the module is 1 byte HEX data. LSB is 0; the address of module must be the even number, and the invalid address will NOT be accepted. Settings will save in the module, and it will be not lost after power OFF. The module default address is 0xA0.

Host sends:

0x0005	C.A.	0x19	Address	Checksum
--------	------	------	---------	----------

Address: 1 byte, LSB is 0; address must be the even number

Module returns success:

0x0004	C.A.	0x19	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xE6	Checksum
--------	------	------	----------

5.2.11 Set multi-card operation

Function: Set multi-card operation. If users need select on card from multi-card, then need to use the multi-card operation. If users set the automatic detecting card, the multi-card operation will be prohibited. If there is more than one card in the RF effective field then the operation will fail. Settings will save in the module; it will be NOT lost after power OFF.



Multi-card operation default enables. This function is suitable for ISO14443A only.

Host sends:

0x0005	C.A.	0x1A	Multi-card enable	Checksum
--------	------	------	-------------------	----------

Multi-card enable: 1 byte, 0: disable multi-card; 1: enable multi-card; other values: RFU

Module returns success:

0x0004	C.A.	0x1A	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xE5	Checksum
--------	------	------	----------

5.2.12 Set ISO15693 automatic detect card AFI and AFI enable

Function: Set AFI and AFI enables of automatic detecting card in ISO15693 mode. If users set AFI and AFI enables, then automatic detecting card only detects the AFI of the card equal to the set AFI. Settings will save in the module; it will be not lost after power OFF. AFI is default 0, AFI function is disable.

Host sends:

0x0006	C.A.	0x1B	AFI	AFI enable	Checksum
--------	------	------	-----	------------	----------

AFI: 1 byte, AFI, 0~0xFF

AFI enable: 1 byte, 0: disable; 1: enable; other value: RFU

Module returns success:

0x0004	C.A.	0x1B	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xE4	Checksum
--------	------	------	----------

5.2.13 Set automatic detect card interval time

Function: Set interval time between two detect card operation

Host sends:

0x0005	C.A.	0x1C	Interval Time	Checksum
--------	------	------	---------------	----------

Interval Time: 1 byte, 0x00 ~ 0xFF, unit is 10mS, 0x01 means 10mS.

Module returns success:

0x0004	C.A.	0x1C	Checksum
--------	------	------	----------

Module returns failure:



0x0004	C.A.	0xE3	Checksum
--------	------	------	----------

5.2.14 Set the default automatic detect card state default

Function: Set the default automatic detects card state when boot device. For temporary open or close automatically detect card, please use the 0x11 command.

Host sends:

0x0005	C.A.	0x1D	State	Checksum
--------	------	------	-------	----------

State: 1 byte, 0x00: OFF; 0x01: ON, other value: RFU

Module returns success:

0x0004	C.A.	0x1D	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xE2	Checksum
--------	------	------	----------

5.2.15 Set automatic detect card and output card UID default

Function: Set automatic detect card and output the card serial number when boot device. Under this mode, the card serial number can be output from serial port when swiping the card. The RF protocol is following ISO14443A and ISO15693. The output format is the same to 0x20 commands or 0x5C commands returned format. This command cannot be operated under IIC mode. While this command is on, then the read/write card cannot be operated because of the card entering into halt state once while the card is detected. If need to read/write card, automatic output the card serial number must be shut temporarily via 0x11 command and then go on with the read/write card operations.

Host sends:

0x0005	C.A.	0x1E	State	Checksum
--------	------	------	-------	----------

State: 1 byte, 0x00: OFF; 0x01: ON, other value: RFU

Module returns success:

0x0004	C.A.	0x1E	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xE1	Checksum
--------	------	------	----------



5.2.16 ISO14443A request cards

Function: ISO14443A request cards, cards include Mifare and other ISO14443A cards. In the returned results, user can judge the length of serial number via the returned data package length, and also judge the card type by ATQA, and whether the card supports ISO14443-4 by SAK. If automatic detect card function was turned on, then this command is only to read the result of automatic detect card.

Host sends:

0x0005	C.A.	0x20	Mode	Checksum
--------	------	------	------	----------

Mode: 1 byte, 0: WUPA (request all); 1: REQA (Request not halted only); other value: RFU

Module returns success:

-	C.A.	0x20	Data	Checksum
---	------	------	------	----------

Data: 4, 7 or 10 bytes card serial number + 2 bytes ATQA + 1 byte SAK

Module returns failure:

0x0004	C.A.	0xDF	Checksum
--------	------	------	----------

5.2.17 Mifare 1K/4K data block read

Function: Read Mifare 1K/4K data block

Host sends:

0x000C	C.A.	0x21	Key ID	Block	Key	Checksum
--------	------	------	--------	-------	-----	----------

Key ID: 1 byte, Key identification

BIT0=0: Key A; BIT0 = 1: Key B;

BIT1=0: using the key in the command; BIT1=1: using the key downloaded by command 0x2D

BIT6:BIT5:BIT4:BIT3:BIT2: if use the downloaded key, this is the index of the key

BIT7=0: The block need to be certified via using the above key

BIT7=1: The block has been certified and passed. This operation no need certification
(the operation and automatically detect the card cannot be used at the same time)

(IMPORTANT: please read Chapter 5.3 about Key identification)

Block: 1 byte, Block number to read, S50 to 0x3F for S50; 0 to 0xFF for S70



Key: 6 bytes, the key of the card

Module returns success:

0x0014	C.A.	0x21	Data	Checksum
--------	------	------	------	----------

Data: 16 bytes card data

Module returns failure:

0x0004	C.A.	0xDE	Checksum
--------	------	------	----------

5.2.18 Mifare 1K/4K multi blocks read

Function: Read multi data blocks in the same sector. The function is supported only in the same sector. If cross sectors, then reading will fail.

Host sends:

0x0000D	C.A.	0x2A	Key ID	Start Block	Blocks	Key	Checksum
---------	------	------	--------	-------------	--------	-----	----------

Key ID: 1 byte, key identification

Start Block: 1 byte, start block to read

Blocks: 1byte, number of blocks to read(depend on structure of card,1-4 for S50)

Key: 6 bytes, the key of the card

Module returns success:

-	C.A.	0x2A	Data	Checksum
---	------	------	------	----------

Data: (blocks)*(16 bytes card data)

Module returns failure:

0x0004	C.A.	0xD5	Checksum
--------	------	------	----------

5.2.19 Mifare 1K/4K data block write

Function: Write the data to a block of Mifare 1K/4K.

Host sends:

0x001C	C.A.	0x22	Key ID	Block	Key	Data	Checksum
--------	------	------	--------	-------	-----	------	----------

Key ID: 1 byte, Key identification

Block: 1 byte, Block number to write, 0 to 0x3F for S50; 0 to 0xFF for S70

Key: 6 bytes, the key of the card

Data: 16 bytes data to write

**Module returns success:**

0x0004	C.A.	0x22	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xDD	Checksum
--------	------	------	----------

5.2.20 Mifare 1K/4K multi blocks write

Function: Write multi data blocks. The function is supported only in the same sector. If cross sector, it will fail while writing the first block in the next sector and then prompt the error in the returned result.

Host sends:

-	C.A.	0x2B	Key ID	Start Block	Blocks	Key	Data	Checksum
---	------	------	--------	-------------	--------	-----	------	----------

Key ID: 1 byte, key identification

Start Block: 1 byte, the start block to write

Blocks: 1 byte, number of blocks to write

Key: 6 bytes, the key of the card

Data: (blocks)*(16 bytes data to write)/block

Module returns success:

0x0004	C.A.	0x2B	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xD4	Checksum
--------	------	------	----------

5.2.21 Mifare 1K/4K purse block initialize

Function: Initialize a block of Mifare 1K/4K as a purse. The format of purse uses Mifare 1K/4K's default. The key of the card could not use as a purse.

Host sends:

0x0010	C.A.	0x23	Key ID	Block	Key	Value	Checksum
--------	------	------	--------	-------	-----	-------	----------

Key ID: 1 byte, Key identification

Block: 1 byte, Block number to initialize, 0 to 0x3F for S50; 0 to 0xFF for S70

Key: 6 bytes, the key of the card

Value: 4 bytes, initialized value, LSB first

**Module returns success:**

0x0004	C.A.	0x23	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xDC	Checksum
--------	------	------	----------

5.2.22 Mifare 1K/4K purse read

Function: Read a purse of Mifare 1K/4K. The format of the purse uses Mifare 1K/4K's default. Module will read the data in the block and check if it is a purse format. If yes, return 4 bytes value data, if no, return failure.

Host sends:

0x000C	C.A.	0x24	Key ID	Block	Key	Checksum
--------	------	------	--------	-------	-----	----------

Key ID: 1 byte, Key identification

Block: 1 byte, block number of the value to read, 0 to 0x3F for S50; 0 to 0xFF for S70

Key: 6 bytes, the key of the card

Module returns success:

0x0008	C.A.	0x24	Data	Checksum
--------	------	------	------	----------

Data: 4 bytes value data, LSB first

Module returns failure:

0x0004	C.A.	0xDB	Checksum
--------	------	------	----------

5.2.23 Mifare 1K/4K purse increment

Function: Purse increment of Mifare 1K/4K. The format of the purse uses Mifare1K/4K's default. Purse increment means the increment on the basis of the original number.

Host sends:

0x0010	C.A.	0x25	Key ID	Block	Key	Value	Checksum
--------	------	------	--------	-------	-----	-------	----------

Key ID: 1 byte, Key identification

Block: 1 byte, block number to initialize, 0 to 0x3F for S50; 0 to 0xFF for S70

Key: 6 bytes, the key of the card

Value: 4 bytes, increment value, LSB first

Module returns success:



0x0004	C.A.	0x25	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xDA	Checksum
--------	------	------	----------

5.2.24 Mifare 1K/4K purse decrement

Function: Purse decrement of Mifare 1K/4K. The format of the purse uses Mifare 1K/4K's default. Purse decrement means the decrement on the basis of the original number. Purse decrement only needs the "read authority" of the key.

Host sends:

0x0010	C.A.	0x26	Key ID	Block	Key	Value	Checksum
--------	------	------	--------	-------	-----	-------	----------

Key ID: 1 byte, Key identification

Block: 1 byte, Block number to initialize, 0 to 0x3F for S50; 0 to 0xFF for S70

Key: 6 bytes, the key of the card

Value: 4 bytes, decrement value, LSB first

Module returns success:

0x0004	C.A.	0x26	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xD9	Checksum
--------	------	------	----------

5.2.25 Mifare 1K/4K purse copy

Function: Copy the Mifare 1K/4K purse to another block in the same sector. The format of the purse uses Mifare 1K/4K's default.

Host sends:

0x000D	C.A.	0x27	Key ID	Source	Target	Key	Checksum
--------	------	------	--------	--------	--------	-----	----------

Key ID: 1 byte, Key identification

Source: 1 byte, block number to copy, 0 to 0x3F for S50; 0 to 0xFF for S70

Target: 1 byte, copy the purse to this block (source and target need in same sector)

Key: 6 bytes, the key of the card

Module returns success:

0x0004	C.A.	0x27	Checksum
--------	------	------	----------

**Module returns failure:**

0x0004	C.A.	0xD8	Checksum
--------	------	------	----------

5.2.26 ISO14443A card halt

Function: Set the current operating ISO14443A card in halt state.**Host sends:**

0x0004	C.A.	0x28	Checksum
--------	------	------	----------

Module returns success:

0x0004	C.A.	0x28	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xD7	Checksum
--------	------	------	----------

5.2.27 Download Mifare 1K/4K card key to module

Function: Download the Mifare 1K/4K card key to module. There are 32 key memory spaces in the module that can storage 32 different keys. While using the downloaded key on the module, this key wouldn't appear on the pin-outs of the PCD. So it could provide more security.**Host sends:**

0x000B	C.A.	0x2D	Key Index	Key	Checksum
--------	------	------	-----------	-----	----------

Key Index: 1 byte, store the Key Index (0 --0x1F) in the module

Key: 6 bytes, the key of the card to store in module

Module returns success:

0x0004	C.A.	0x2D	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xD2	Checksum
--------	------	------	----------

5.2.28 ISO14443-4 TYPE-A card reset (RATS)

Function: Reset an ISO14443-4 TYPE-A card. Before executing this command, it needs to request card and verifies the card support ISO14443-4 in the SAK of card. If the automatic detecting card function is on, after a successful implementation of the RATS command, the



automatic detect card function will be forced to shut.

Host sends:

0x0004	C.A.	0x30	Checksum
--------	------	------	----------

Module returns success:

-	C.A.	0x30	Info	Checksum
---	------	------	------	----------

Info: card reset information, length depends on card

Module returns failure:

0x0004	C.A.	0xCF	Checksum
--------	------	------	----------

5.2.29 Send APDU to ISO14443-4 card

Function: Send APDU to an ISO14443-4 card. Before executing the command, it needs to reset the card. If operate ISO14443-4 card, then need to turn OFF the automatic detect card. That's because the ISO14443-4 card's state will be lost in automatic detecting card.

Host sends:

-	C.A.	0x31	APDU	Checksum
---	------	------	------	----------

APDU: APDU to send

Module returns success:

-	C.A.	0x31	Response	Checksum
---	------	------	----------	----------

Response: card response, length depends on the detailed command

Module returns failure:

0x0004	C.A.	0xCE	Checksum
--------	------	------	----------

5.2.30 Ultra Light card read

Function: Read the data from Ultra Light card. A read command will read 4 blocks data from the card. If read start block is the last block (0x0F), then these 4 blocks data are the 15th, 0th, 1st and 2nd block.

Host sends:

0x0005	C.A.	0x41	Read start block	Checksum
--------	------	------	------------------	----------

Read start block: 1 byte, start block number to read

Module returns success:



0x0014	C.A.	0x41	Data	Checksum
--------	------	------	------	----------

Data: 16 bytes card data of 4 blocks, a read operation read 4 blocks from the start block.

Module returns failure:

0x0004	C.A.	0xBE	Checksum
--------	------	------	----------

5.2.31 Ultra Light card write

Function: Write data to Ultra Light card. Each for one block data

Host sends:

0x0009	C.A.	0x42	Block	Data	Checksum
--------	------	------	-------	------	----------

Block: 1 byte, block number to write

Data: 4 bytes data to write

Module returns success:

0x0004	C.A.	0x42	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xBD	Checksum
--------	------	------	----------

5.2.32 SAM slot default baud rate set

Function: Before SAM card reset, to set default baud rate of the SAM slot. This baud rate will be used by the reader to reset the SAM. In ISO7816, the default baud rate for the card is 9600bps.

Host sends:

0x0005	C.A.	0x50	Baud rate	Checksum
--------	------	------	-----------	----------

Baud rate: 1 byte, baud rate code of SAM, 0: 9600bps (default); 2: 38400bps; other value:

RFU

Module returns success:

0x0004	C.A.	0x50	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xAF	Checksum
--------	------	------	----------



5.2.33 SAM reset

Function: Reset the SAM in the slot, get ATQ and set the relevant communication parameter.

Host sends:

0x0004	C.A.	0x51	Checksum
--------	------	------	----------

Module returns success:

-	C.A.	0x51	Info	Checksum
---	------	------	------	----------

Info: reset info of SAM card, length depends on card

Module returns failure:

0x0004	C.A.	0xAE	Checksum
--------	------	------	----------

5.2.34 Set SAM baud rate after reset (through PPS)

Function: Some SAM support PPS instruction and then user could modify the communication baud rate.

Host sends:

0x0005	C.A.	0x52	Baud rate	Checksum
--------	------	------	-----------	----------

Baud rate: 1 byte, baud rate code of SAM, 0: 9600bps; 2: 38400bps; other value: RFU

Module returns success:

0x0004	C.A.	0x52	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xAD	Checksum
--------	------	------	----------

5.2.35 Send APDU to SAM

Function: Send APDU (COS command) to SAM and get result.

Host sends:

-	C.A.	0x53	APDU	Checksum
---	------	------	------	----------

APDU: APDU need to send

Module returns success:

-	C.A.	0x53	Response	Checksum
---	------	------	----------	----------

Response: response of SAM, length depends on detailed commands

**Module returns failure:**

0x0004	C.A.	0xAC	Checksum
--------	------	------	----------

5.2.36 Set module contactless protocol

Function: Set module card operating protocol, default is ISO14443A. The setting will not be saved and will return to the default state at next power up.

Host sends:

0x0005	C.A.	0x70	Model	Checksum
--------	------	------	-------	----------

Model: 1 byte, 0: ISO14443A; 1: ISO14443B; 2: ISO15693; other value: RFU

Module returns success:

0x0004	C.A.	0x70	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0x8F	Checksum
--------	------	------	----------

5.2.37 ISO14443-4 TYPE B card request

Function: ISO14443-4 TYPE B card request and set the communication parameters.

Host sends:

0x0006	C.A.	0x60	Model	AFI	Checksum
--------	------	------	-------	-----	----------

Model: 1 byte, 0: WUPB (Wakeup B); 1: REQB (Request B); other values: RFU

AFI: 1 byte, the AFI to request, if request all AFI, please use 0x00

Module returns success:

0x0010	C.A.	0x60	Info	Checksum
--------	------	------	------	----------

Info: 12 bytes, card reset information. It contains: 0x50 (1 byte), PUPI (4 bytes), application data (4 bytes), protocol information (3bytes). For more details, please reference ISO14443-3 "ATQB Response" part.

Module returns failure:

0x0004	C.A.	0x9F	Checksum
--------	------	------	----------

5.2.38 ISO14443-4 TYPE B card halt

Function: Set the current ISO14443B card halt.

**Host sends:**

0x0008	C.A.	0x62	PUPI	Checksum
--------	------	------	------	----------

PUPI: 4 bytes, PUPI of the card to halt

Module returns success:

0x0004	C.A.	0x62	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0x9D	Checksum
--------	------	------	----------

5.2.39 SR serial cards 1 slot initiate card

Function: SR serial cards (SR176/SRI512/SRI1K/SRI2K/SRI4K/SRIX4K, the same below) single channel initiate card. Before read/write card, it needs to use the command of “SR serial cards select” to select the card. More detailed card operations see the card manual please.

Host sends:

0x0004	C.A.	0x63	Checksum
--------	------	------	----------

Module returns success:

0x0005	C.A.	0x63	Card ID	Checksum
--------	------	------	---------	----------

Card ID: 1 byte, card ID

Module returns failure:

0x0004	C.A.	0x9C	Checksum
--------	------	------	----------

5.2.40 SRI serial cards 16 channels initiate card

Function: SR serial cards (SRI512/SRI1K/SRI2K/SRI4K/SRIX4K, the same below) 16 channels initiate card.

Host sends:

0x0004	C.A.	0x64	Checksum
--------	------	------	----------

Module returns success:

0x0024	C.A.	0x64	Status	Card ID	Checksum
--------	------	------	--------	---------	----------

State: 16 bytes, the initiate result of 16 channels (0–15), 0x00: current channel success;

0xE8: current channel collision; 0xFF: current channel no card

Card ID: 16 bytes; card ID of 16 channels; it is valid while the implement result of current



channel is successful

Module returns failure:

0x0004	C.A.	0x9B	Checksum
--------	------	------	----------

5.2.41 SR serial cards select

Function: Select a SR card as the CURRENT CARD. You could operate the card after select.

Host sends:

0x0005	C.A.	0x65	Card ID	Checksum
--------	------	------	---------	----------

Card ID: 1 byte; Card ID to select

Module returns success:

0x0005	C.A.	0x65	Card ID	Checksum
--------	------	------	---------	----------

Card ID: 1 byte; the selected card ID

Module returns failure:

0x0004	C.A.	0x9A	Checksum
--------	------	------	----------

5.2.42 SRI serial cards return to inventory

Function: Set a selected SRI card returning to inventory state.

Host sends:

0x0004	C.A.	0x66	Checksum
--------	------	------	----------

Module returns success:

0x0004	C.A.	0x66	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0x99	Checksum
--------	------	------	----------

5.2.43 SR serial cards completion

Function: Set the CURRENT CARD into the completion state. If want to operate the card again, then need to move the card out of the antenna RF effective field and initiate the card.

Host sends:

0x0004	C.A.	0x67	Checksum
--------	------	------	----------

**Module returns success:**

0x0004	C.A.	0x67	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0x98	Checksum
--------	------	------	----------

5.2.44 SR176 card read

Function: Read SR176 card data block.**Host sends:**

0x0008	C.A.	0x68	Block	Checksum
--------	------	------	-------	----------

Block: 1 byte, data block number to read

Module returns success:

0x0006	C.A.	0x68	Data	Checksum
--------	------	------	------	----------

Data: 2 bytes, data read

Module returns failure:

0x0004	C.A.	0x97	Checksum
--------	------	------	----------

5.2.45 SR176 card write

Function: Write the data block of SR176 card. After write, module will read the data and compare. If not equal, then return failure.**Host sends:**

0x0007	C.A.	0x69	Block	Data	Checksum
--------	------	------	-------	------	----------

Block: 1 byte, data block number to read

Data: 2 bytes, data to write

Module returns success:

0x0004	C.A.	0x69	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0x96	Checksum
--------	------	------	----------

5.2.46 SR176 data block lock

Function: Write the data of SR176 lock register of the card. The module will check the lock



result after write.

Host sends:

0x0005	C.A.	0x6A	Lock value	Checksum
--------	------	------	------------	----------

Locked value: 1 byte; the lock register values to write

Module returns success:

0x0004	C.A.	0x6A	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0x95	Checksum
--------	------	------	----------

5.2.47 SRI serial cards read

Function: Read data block of SRI serial card

Host sends:

0x0005	C.A.	0x6B	Block	Checksum
--------	------	------	-------	----------

Block: 1 byte; data block number to read

Module returns success:

0x0008	C.A.	0x6B	Data	Checksum
--------	------	------	------	----------

Data: 4 bytes, data read

Module returns failure:

0x0004	C.A.	0x94	Checksum
--------	------	------	----------

5.2.48 SRI serial cards write

Function: Write data block of SRI serial card. After write, module will read data and compare. If not equal, then return failure.

Host sends:

0x0009	C.A.	0x6C	Block	Data	Checksum
--------	------	------	-------	------	----------

Block: 1 byte; data block number to read

Data: 4 bytes; data to write

Module returns success:

0x0004	C.A.	0x6C	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0x93	Checksum
--------	------	------	----------



5.2.49 SRI serial cards data block lock

Function: Write the data of SRI card to lock the register. It will check the locked result after write.

Host sends:

0x0005	C.A.	0x6D	Locked value	Checksum
--------	------	------	--------------	----------

Locked value: 1 byte; the locked register values to write

Module returns success:

0x0004	C.A.	0x6D	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0x92	Checksum
--------	------	------	----------

5.2.50 SRI serial cards read UID

Function: SRI serial cards read UID

Host sends:

0x0004	C.A.	0x6E	Checksum
--------	------	------	----------

Module returns success:

0x000C	C.A.	0x6E	UID	Checksum
--------	------	------	-----	----------

UID: 8 bytes, UID of CURRENT CARD

Module returns failure:

0x0004	C.A.	0x91	Checksum
--------	------	------	----------

5.2.51 SRIX serial cards authentication

Function: SRIX serial card authentication; Anti clone function of the SRIX serial card.

Host sends:

0x000A	C.A.	0x6F	Data	Checksum
--------	------	------	------	----------

Data: 6 bytes, data input

Module returns success:

0x0007	C.A.	0x6F	Result	Checksum
--------	------	------	--------	----------

Result: 3 bytes, result return

Module returns failure:



0x0004	C.A.	0x90	Checksum
--------	------	------	----------

5.2.52 ISO15693 inventory

Function: Find a card in RF effective field. If success, to set the tag as CURRENT TAG.

If automatic detecting card function was turned on, then this command is to take the result of automatic detecting card, not to detect card after received the command.

Host sends:

0x0005	C.A.	0x5C	AFI	Checksum
--------	------	------	-----	----------

AFI: 1byte AFI, detect card equal to AFI only

If not use AFI, then host sends:

0x0004	C.A.	0x5C	Checksum
--------	------	------	----------

Module returns success:

0x000D	C.A.	0x5C	DSFID	UID	Checksum
--------	------	------	-------	-----	----------

DSFID: 1 byte, DSFID of CURRENT TAG

UID: 8 bytes, UID of CURRENT TAG

Module returns failure:

0x0004	C.A.	0xA3	Checksum
--------	------	------	----------

5.2.53 ISO15693 stay quiet

Function: Set the CURRENT TAG stay quiet

Host sends:

0x0004	C.A.	0x5D	Checksum
--------	------	------	----------

Module returns success:

0x0004	C.A.	0x5D	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xA2	Checksum
--------	------	------	----------

5.2.54 ISO15693 get system information

Function: Get the system information of CURRENT TAG

Host sends:



0x0004	C.A.	0x5E	Checksum
--------	------	------	----------

Module returns success:

-	C.A.	0x5F	Data	Checksum
---	------	------	------	----------

Data: system information, the content to rely on the functions of the card itself, please refer to the data sheet of the card itself

Module returns failure:

0x0004	C.A.	0xA1	Checksum
--------	------	------	----------

5.2.55 ISO15693 reset to ready

Function: Set a stay quiet TAG reset to ready**Host sends:**

0x000C	C.A.	0x5F	Data	Checksum
--------	------	------	------	----------

Data: 8 bytes, UID of the tag to reset to ready

Module returns success:

0x0004	C.A.	0x5F	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xA0	Checksum
--------	------	------	----------

5.2.56 ISO15693 read blocks

Function: Read data blocks of CURRENT TAG**Host sends:**

0x0006	C.A.	0x54	Start	Blocks	Checksum
--------	------	------	-------	--------	----------

Start: 1 byte, read start block

Blocks: 1 byte, number of blocks to read, max. 62 blocks in one command

Module returns success:

-	C.A.	0x54	Data	Checksum
---	------	------	------	----------

Data: Blocks * 4 bytes,

Module returns failure:

0x0006	C.A.	0xAB	Checksum
--------	------	------	----------



5.2.57 ISO15693 write blocks

Function: Write data blocks of CURRENT TAG

Host sends:

-	C.A.	0x55	Start	Blocks	Data	Checksum
---	------	------	-------	--------	------	----------

Start: 1 byte, write start block

Blocks: 1 byte, number of blocks needs to write, max. 62 blocks

Data: Blocks * 4 bytes, data to write to tag/block

Module returns success:

0x0004	C.A.	0x55	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xAA	Checksum
--------	------	------	----------

5.2.58 ISO15693 block lock

Function: Lock a block of CURRENT TAG

Host sends:

0x0005	C.A.	0x56	Block	Checksum
--------	------	------	-------	----------

Block: 1 byte, block number to lock

Module returns success:

0x0004	C.A.	0x56	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xA9	Checksum
--------	------	------	----------

5.2.59 ISO15693 AFI write

Function: Write AFI to CURRENT TAG

Host sends:

0x0005	C.A.	0x57	AFI	Checksum
--------	------	------	-----	----------

AFI: 1 byte, AFI value to write to tag

Module returns success:

0x0004	C.A.	0x57	Checksum
--------	------	------	----------

Module returns failure:



0x0004	C.A.	0xA8	Checksum
--------	------	------	----------

5.2.60 ISO15693 AFI lock

Function: Lock AFI of CURRENT TAG

Host sends:

0x0004	C.A.	0x58	Checksum
--------	------	------	----------

Module returns success:

0x0004	C.A.	0x58	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xA7	Checksum
--------	------	------	----------

5.2.61 ISO15693 DSFID write

Function: Write DSFID of CURRENT TAG

Host sends:

0x0005	C.A.	0x59	DSFID	Checksum
--------	------	------	-------	----------

DSFID: 1 byte, DSFID value to write to tag

Module returns success:

0x0004	C.A.	0x59	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xA6	Checksum
--------	------	------	----------

5.2.62 ISO15693 DSFID lock

Function: Lock DSFID of CURRENT TAG

Host sends:

0x0004	C.A.	0x5A	Checksum
--------	------	------	----------

Module returns success:

0x0004	C.A.	0x5A	Checksum
--------	------	------	----------

Module returns failure:

0x0004	C.A.	0xA5	Checksum
--------	------	------	----------



5.2.63 ISO15693 get blocks security

Function: Get blocks security of CURRENT TAG

Host sends:

0x0006	C.A.	0x5B	Start	Blocks	Checksum
--------	------	------	-------	--------	----------

Start: 1 byte, start block

Blocks: 1 byte, number of blocks

Module returns success:

-	C.A.	0x5B	Data	Checksum
---	------	------	------	----------

Data: bytes equal to the sent blocks in the command, the locked info of data block

Module returns failure:

0x0004	C.A.	0xA4	Checksum
--------	------	------	----------



5.3 About KEY Identification

There is a byte of KEY identification in command of Mifare 1K/4K read/write. This byte will identify the way to get the card key

Key Identification							
BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0

BIT0=0: KEY A; authenticate Key A of the card.

BIT0=1: KEY B; authenticate Key B of the card.

BIT1=0: Using the following 6bytes Key in command.

BIT1=1: Using the downloaded Key by command.

BIT6: BIT5: BIT4: BIT3: BIT2: Index of the Key already downloaded (0 to 31).

BIT7=0: The block need to be certified via the above key

BIT7=1: The block has been authenticated. Current operation does not need authentication (this operation and automatically detect card cannot be used at the same time)

If BIT1 is 0, then these 5 bits (BIT6 to BIT2) are unused. If BIT1 is 1, then use the already downloaded key. Users need to download key(s) by using command first; and then the 6 bytes key in the command are left unused, but the 6-byte is necessary in the command sequence.

E.g.: key Identification is 0x00; binary system is 00000000, here:

BIT0 = 0; authenticate Key A of the card

BIT1 = 0; using the key in command

BIT6:BIT5:BIT4:BIT3:BIT2: 00000, because not use the already downloaded key, the index key is unused in this command.

E.g.: key Identification is 0x33; binary system is 00110011, here:

BIT0 = 1; authenticate Key B of the card

BIT1 = 1; using the downloaded Key in the module

BIT6:BIT5:BIT4:BIT3:BIT2:01100, then use the already downloaded key 01100, and hexadeciml is 0x0C, decimal is 12.

5.4 About the automatic detecting card

The automatic detecting card function supports ISO14443A and ISO15963. When power on, the default state is set via 0x1D command. This setting will keep on next power up. After power on, the automatic detect card function can be started or shut via 0x11 commands. The module after re-power will return to the set default state.

If the card operating protocol is set to ISO15963, then automatic detect card only detect the ISO15963 cards. And if card operating protocol is set to ISO14443A, then detect the ISO14443A cards.

Automatic detecting card supports full function of ISO15963.

Automatic detecting card supports full function of Mifare 1K/4K and Ultra Light.



The CPU card can be detected when the automatic detect card function is working. If to operate CPU card, first to send RATS command (0x30). After the module has received correct RATS command, and then the automatic detect card function will be shut. In using, please note this.

Automatic detecting card supports only one card operation. If there is more than one card in the RF effective field then the operation may fail. Then the multi-card operation will automatically turn OFF while the automatic detect card function is on.



5.5 Example of commands

5.5.1 About UART communication protocol

For example:

Read block 1: 000C00210001AABBCCDDEEFF3D

000C: package length; from 000C to FF are total 0x000C bytes

00: UART multi-device communication address

21: instruction of read

00: Authenticate KEY A, using the key in package. The key is “AABBCCDDEEFF”

01: block number to read

AABBCCDDEEFF: key of the sector of the card

3D: $00 \wedge 0C \wedge 00 \wedge 21 \wedge 00 \wedge 01 \wedge AA \wedge BB \wedge CC \wedge DD \wedge EE \wedge FF = 3D$, in sample program, the function will calculate it.

5.5.2 UART commands sample

Read block 1 000C00210001FFFFFFFFFFFF2C

Read block 255 (S70) 000C002100FFFFFFFFFFFFFD2

Write block 1 001C00220001FFFFFFFFFFFF1234567890ABCDEF1234567890ABCDEF3F

Request card (WUPA) 000500200025

Halt card 0004001216

5.5.3 IIC commands sample

Read block 1 000C00210001FFFFFFFFFFFF2C

Read block 255 (S70) 000C002100FFFFFFFFFFFFFD2

Write block 1 001C00220001FFFFFFFFFFFF1234567890ABCDEF1234567890ABCDEF3F

Request card (WUPA) 000500200025

Halt card 0004001216

5.6 Interface program source code

We have interface program source code to help users. They are KELL project in C51 or ASM51 format. Please mail to jinmuyu@vip.sina.com to obtain the program.